

SMALL REPAIRS

UNBOXING & INSTRUCTIONS




YOUR KIT INCLUDES:

- Concrete Mix
- Bonding Agent
- Mixing Sticks
- Brush
- Sanding Sticks

STEPS:

1. Dispense a small amount of dry material. Seal the bag tightly after dispensing.
2. Add a small amount of bonding agent and mix until a smooth consistency is reached.
3. Continue adding dry material and bonding agent until the mixture reaches a paste-like consistency.
4. Press and brush material into hairline cracks until desired look is reached. Multiple coats can be used.
5. While fill material is curing, brush and dab excess material off your printed piece. Use the supplied sanding sticks to smooth print lines if needed.

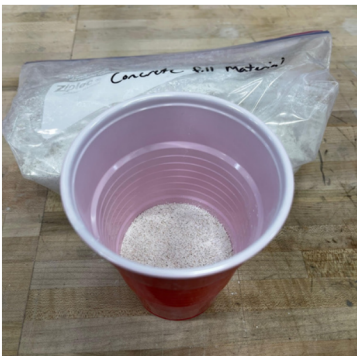

Dry Mix



Bonding Agent



Repairing Paste



Brush on to Repair



- For large repairs, please contact create@pikus3d.com. Due to the variable nature of 3DPG, large repair kits may not be available for custom designs.
- If a reprint is required, please refer to the [product warranty](#), which can be found on our website.
- Contact create@pikus3d.com to order a new piece.



- Contact alex@pikus3d.com with any questions on repairing your 3DPG.
- If immediate assistance is needed, please call or text Alex Joos at **801.649.8557**.

Designed, Built, Tested, and Certified by Team Pikus3D



CONTACT US

Contact us with any questions, comments, or concerns

